



ATLANTIC CITY Installation Guide

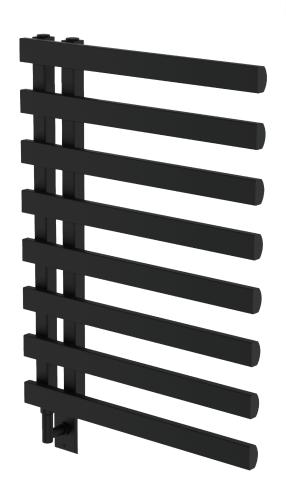



ATLANTIC CITY DIAGRAM

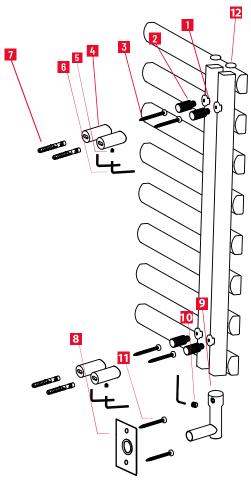

Accessories



Solid Fixing Lug



Wall Support



Wall Plugs 4 pcs



Set Screws 1 piece





Wall Support Core



Grub Screw 4 pcs



Plate 1 piece Wall Plate Screws





Screw 4 pcs


6

Allen Key 2 pcs 9


Plate 1 piece

Plastic Cap 2 pcs


Required Tools














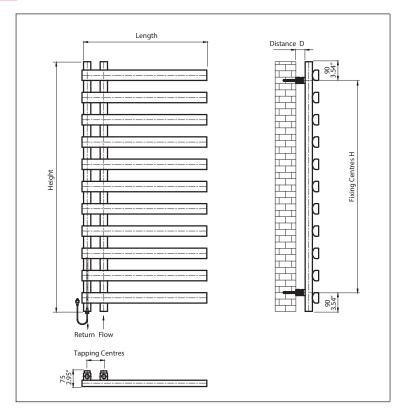


PRODUCT INSTALLATION

- All the dimensions are shown in millimetres/inch
- Horizontal Tube 50mmx30mm
- Vertical Tube 35mmx35mm
- Bracket length 27mm
- Rated 100,150,300 or 400W dependent on model
- Suitable for 120V supply, three wire connection
- The electric towel rails conform to: the requirements of UL499 CSA C22.2 No.60335-1 and E60335-2-43

Please Note:

- All towel warmers contain a factory filled glycol mixture
- Not suitable for use on domestic hot water system
- Before staring, ensure situation and orientation

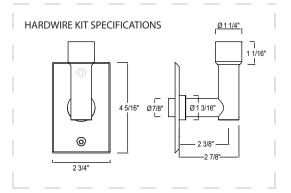

	Vernon	Weight (KG)	Tapping Centres (mm)/inch	Fixing Centres (H) (mm)/inch	Distance (D) (mm)/inch	Height (mm)/inch	Length (mm)/inch
	ACY-0800600	18.11	80/3.15"	620/24.41"	49/1.93"	800/31.5"	600/23.62"
	ACY-1200600	25.00	80/3.15"	1020/40.16"	49/1.93"	1200/47.24"	600/23.62"

Step 1


Use the wall support core (2) to fix the solid fixing lug (1) to the threaded metal pad on the vertical bar on the back of the towel warmer.

Step 2

Use a tape to measure the distance between the center points of each wall bracket tube; record the distances between points AB, AC, CD, and BD. Mounting point C will determine electrical box location. See Electrical Assembly in following instructions.

Step 3

Drill A, B, C, and D holes with an appropriately sized bit.

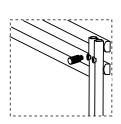


Step 4


Insert wall screw (3) through wall support (4) then screw into wall plug (7).



Step 5


Install the tube onto the wall support (4)






Step 6

Add the plastic caps onto the top to cover the screw head and valve.






PLUG-IN INSTALLATION

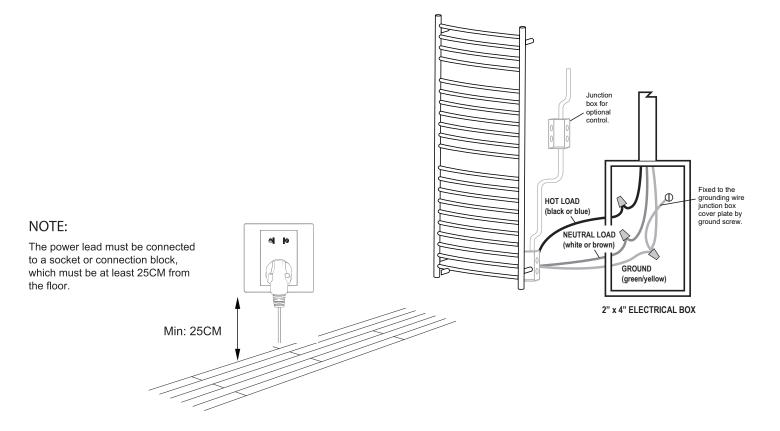

Step 7


Plua-In

Equipped with a 1.3m power cord and AU plug for easy access to an outlet

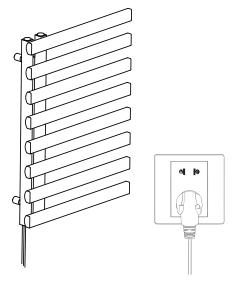



HARDWIRE INSTALLATION

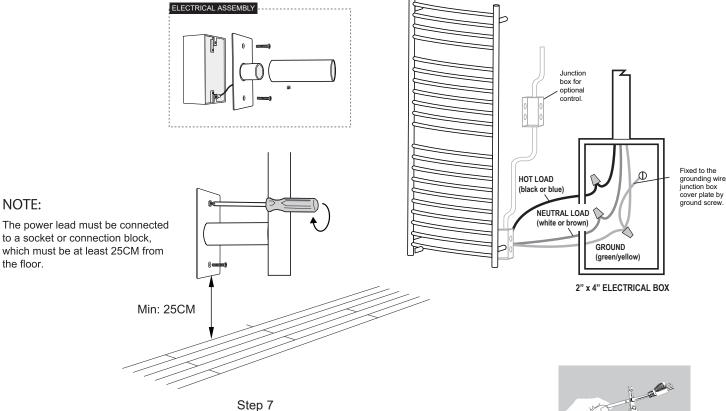

Cut the Plug off the Power Cord

Using proper tools, cut the plug off the power cord. *Please note: cutting the cord does not compromise warranty or ETL certification*.

Step 8

Without Hardware Kit

Guide the electrical cord through the plastic cap and connect with electrical box.

Step 9

With Hardware Kit

- Create a hole in the wall to let the Hard Wire Leg go through (approx. 2 in. x 3 3/4 in.).
- The leg will be covered by Plate so the hole should be large enough to allow space for electrical connection and leg to go through but not too large so that the plate can cover it fully.
- Guide the electrical cord through the electrical connection mounting tube and use the mounting screw to tighten the electrical connection mounting tube to the vertical bar.



